

BakeMax BMPME30 30Qt. 3 Speed Planetary Mixer Operations Manual



Toll Free: 1-800-565-2253 Email: Info@BakeMax.com www.BakeMax.com





WARNING: PLEASE READ AND FOLLOW THE INSRUCTIONS BELOW BEFORE OPERATING PRODUCT

- When using the machine, please confirm that you have read all the instructions within this manual.
- Beware of any child/children or any other persons who are near the machine before operating.
- Do not put hand near moving parts.
- Remove all obstacles, which may interfere with machine functions.
- Keep work area clean and clear of clutter.
- Do not sit or stand on machine
- Do not wear loose cloth or jewellery when operating machine as it may get caught in moving parts and cause injury
- When the machine is abnormal or broken, you should stop using and check it or have it checked by a professional.
- Disconnect from power source before performing maintenance on the machine.
- When machine is not in use, please clean and store properly.
- Do not place any electrical parts or plug/cord in water.
- The cord should be away from the heat.
- Don't hang out the cord on the desk or cabinet.
- Machine may have sharp or pointed edges, use caution when cleaning.
- This machine should only be operated by personnel who can read, understand and respect warnings and instructions regarding this machine and the manual.
- Keep this manual in a safe place for further and regular reference and ordering parts.
- Please write model serial and date of purchase of your machine in the space provided in case you will need to order parts in the future.
- Always work by security code of your country, state, province, city or committee of your work place.



Introduction

The BMPME20 & BMPME30 Mixers are advanced machines which are carefully designed. It uses the principle of planetary motion and does planetary motion agitator in barrels to mix crushed, powder and liquid food and other functions. The machine is working smoothly. For safety, because it is equipped with protective cover, it is safe and reliable, and equipped with multistage speed and a variety of agitator, the user can according to different requirements, select the appropriate speed and agitator to realize these functions. Spare parts ,which are in contact with food, are made of stainless steel or with special surface treatment, all fit for national health standards.

The machine is with good appearance, convenient operation, high working efficiency, and is suitable for hotels, restaurants, restaurants, food processing plants and canteen food, also for the pharmaceutical, chemical raw materials such as factories and mines modulation unit raw material.

Motor is improved by using German technology, and with the centrifugal switch which lets machine turn on/ off quickly. A full copper wire high-temperature motor has the ability of heating dissipation.

The whole machine gear is all processed by after precision machining and special heat treatment. Turbine, worm, bearings are produced by our company patent design, durable. Machine can be used easily and conventional and Working parts of products is easy to install, unpick and wash. High-quality stainless-steel cylinder and stainless-steel accessories are clean and healthy.

Standard Attachments: agitator with snake type, pat type, bud type. Speed can be adjusted depending on the type of agitator to achieve the best effect.



INSTALLATION

When you dismantle the packing after buying, please check in detail whether there is damage which is due to improper transportation or storage and accessories are complete. If there are damaged or missing parts , please inform distribution unit processing or replacement within seven days.

The Mixer should be installed in a dry ventilation, no corrosion and no flammable and no explosive substances indoors. Blender is installed on the hard ground, the ground needs to bear the pressure of 200 kilograms, the ground tilt Angle is not greater than 5 degrees. Keep the Mixer no less than 15cm from the nearest wall.

If do not have the plug of the power supply lead, machine should be connected to the whole level disconnect device which is installed on a fixed position by the user at least 3 mm . The disconnect device rated current shall be greater than or equal to 35 A.

Machine is equipped with motor overload protection device, in the case of overload or be blocked, the motor is automatically cut off power supply to keep a security protection for motor. In this situation the power supply must be cut off, remove obstacles, and then connected to the power and restart the machine.

Place the mixer in a convenient location. There should be adequate space around the mixer for the user to operate the control and install and remove bowls.



ELECTRICAL CONNECTIONS

WARNING: THIS SUPPLY CORD ON THIS MACHINE IS PROVIDED WITH A THREE-PRONG GROUNDING PLUG. IT IS IMPERATIVE THAT THE OUTLET TO WHICH THIS PLUG IS CONNECTED BE PROPERLY GROUNDED. IF THE RECEPTACLE IS NOT THE PROPER GROUNDING TYPE, AN ELECTRICIAN SHOULD BE CONTACTED.

WARNING: THIS SUPPLY CORD ON THIS MACHINE IS PROVIDED WITH A THREE-PRONG GROUNDING PLUG. IT IS IMPERATIVE THAT THE OUTLET TO WHICH THIS PLUG IS CONNECTED BE PROPERLY GROUNDED. IF THE RECEPTACLE IS NOT THE PROPER GROUNDING TYPE, AN ELECTRICIAN SHOULD BE CONTACTED.

OPERATION WARNING: MOVING BEATER IN THE BOWL. KEEP HAND, CLOTHING, AND UTENSILS OUT WHILE IN OPERATION.

Cleaning

- This unit has been coated for shipping purposes, please clean before use.
- Do not use any liquid pressurized cleaning equipment on this machine.
- Disconnect the power supply before cleaning.
- Only use food grade non-abrasive cleaning agents.
- Follow any additional cleaning / maintenance listed below.
- Do Not Wash the Machine Directly with Water



Features

The BakeMax BMPME30 - 30 Qt Planetary Mixer provides durability, long life, and excellent mixing performance. They are safe, easy to use and capable of a broad range of dough and food mixing applications.

Features:

- 100% Gear Driven
- 1HP Motor offers enough power to mix Stiffer Doughs and Larger Batches
- All metal and die-cast aluminum body
- Transmission is made of Hardened Alloy Steel Gears
- All Shafts are Mounted in Ball Bearings
- Manual 3 Speed Control (113 / 168 / 400 RPM)
- Planetary Mixing Action ensures perfect results
- Simple hand lift for tool change and bowl removal
- Includes Dough Hook, Flat Beater and Wire Whip
- Safety Guard has Automatic Shut-Off Safety Feature when the Guard is Opened at any Speed
- Start & Stop Button
- Plug & Go Nema 5-15P Plug
- 1-Year Limited Warranty

Technical Specifications:

- Exterior Dimensions (WDH): 20" x 23" x 33"
- 110V / 10A / 1100W / 60Hz / 1Ph
- Net Weight 130 lbs.

Shipping Specifications:

- Packaged Dimensions (WDH): 22" x 25" x 40"
- Packaged Weight 167 lbs.



All models are furnished with 2 BUTTON SWITCHES which control the power to the mixer.

The GEAR SHIFT LEVER (No.3) is used to change speeds. Always stop the mixer before changing speeds. To change speeds, turn the switch OFF, move the gear shift lever to the desired speed, and turn the switch back ON.


Speed 1 (low) - This speed is for heavy mixtures such as bread dough, heavy


• Batters and potatoes.

• Speed 2 (medium) - This speed is for light dough which must raise quickly, heavy batters, and some whipping operations.

• Speed 3 (high) - This speeds fast speed for light work such as whipping cream, beating eggs, and mixing thin batters.

- 1. Bowl Lift Slideways
- 2. Bowl Lift Handle
- 3. Gear Shift Lever
- 4. Drip Cup
- 5. Agitator
- 6. Bowl

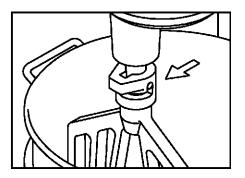

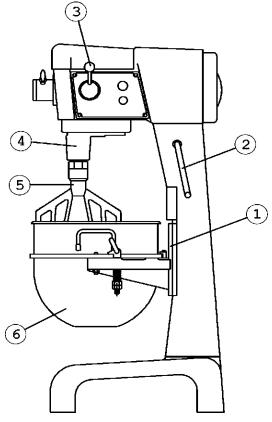



AGITATOR

To install an agitator (No 5), the bowl must be installed and fully lowered. Place the agitator in the bowl, push it up on the agitator shaft, and turn it clockwise to seat the shaft pin in the slot of the agitator shank.

DOUGH HOOK:

It is frequently used for heavy bread dough, and preferably to be used at low speed. The moisture content of heavy dough is critical when selecting proper mixing speed. You should never use 2^n speed when mixing heavy dough with an Absorption Ratio (AR) of 50% or less

BEATER:

It is commonly used for thin batters, cake, and mashing potatoes, like stuffing and preferably to be used at middle speed.

Wire Whip

It is best for whipping cream and beating eggs and preferably to be used at high speed.

BOWL - CAPACITY: 30 QUART

New mixers bowls and agitators (beaters, whip, and dough hooks) should be thoroughly washed with hot water and mild soap solution, rinse a mild soda or vinegar solution, and thoroughly rinsed BEFORE being put into service.

This cleaning procedure followed for bowls and agitators before whipping egg white eggs.

The bowl must be installed before the agitator. To install lower bowl support. Position the bowl so the alignment back of the bowl is in the bowl retainer and the alignment of the bowl support fits in the holes on the sides of the bowl.



MAINTENANCE

NOTE: ALL MAINTENANCE WORK SHOULD BE DONE ONLY AFTER UNIT HASBEEN DISCONNECTED FROM ELECTRICAL POWER AND GROUNDING. Never use a metal or stiff brush to clean the mixer. Never clean the mixer with a water hose or any fluid pressure.

The mixer should be thoroughly cleaned daily. Bowls and agitators should be removed from the mixer and cleaned in a sink. DO NOT use a hose to clean the mixer - it should be washed with a clean damp cloth.

The transmission case and planetary mechanism should be inspected weekly for leaks, damage, etc. Should it become necessary to repack the ball bearings, an authorized service technician or the manufacturer should be contacted. Use of unproved grease of lubricants may lead to damage and void the unit's warranty.

The **bowl lift slid ways** should be lubricated semi-annually, or more often under heavy usage. Disconnect the unit from the power supply before removing the top housing or apron. The **drip cup** (Fig. 1) should be inspected periodically for moisture or lubricant dripping. Remove the cup and wipe it with a soft cloth.

CLEANING

The mixer should be thoroughly cleaned daily.

Bowls and agitators should be removed from the mixer and cleaned in a sink. The drip cup should be removed periodically and wiped clean. A large flat blade screwdriver may be used to remove the drip cup **MIXING HEAVY DOUGH** The moisture content of heavy dough is a critical factor when selecting proper mixing speed. You should never use 2nd speed when mixing heavy dough with an Absorption Ratio (AR) of 50% or less. To determine the Absorption Ratio (AR) of a product, divide the water weight by the flour weight.

Example: Calculate the Absorption Ratio of a mixture containing 10 lbs. Of flour



Mixing Dough & Capacity Information

The moisture content of heavy dough is a critical factor when selecting proper mixing speed. You should never use 2nd speed when mixing heavy dough with an Absorption Ratio (AR) of 50% or less. To determine the Absorption Ratio (AR) of a product, divide the water weight by the flour weight.

Example: Calculate the Absorption Ratio of a mixture containing 10 lbs. Of flour and 5 lbs. of water. $5 \div 10 = 0.50 = 50 \% = AR$

Notes:

• If using high gluten or rice flour, please reduce capacity by 10%.

• If using water colder than 70°F, ice, or chilled flour, please reduce capacity by 10%.

• Attachment hub should not be used while mixing.

• Mixer should be powered off when changing speeds

This chart should be used as a guide only. Type of flour and other factors can vary and may require batch size to be adjusted.

Capacity Conversion:

- 1 Gallon of Water Weighs 8.33 lbs.
- 1 Liter of Water Weighs 1 kg or 2.2 lbs.
- 1 lbs. = 0.454 kg / 1 kg = 2.2 lbs.
- 1 US Liquid Quart = 0.946 Liters

Speed:

• *1st Speed Only

PRODUCT	TOOL	BMPME30
Egg Whites	Whip	1.5 qts.
Mashed Potatoes	Beater	22 lbs.
Mayonnaise (qts. Oil)	Beater	12.7 qts.
Meringue (qts. Water)	Whip	1 qts.
Waffle/Pan cake Batter	Beater	12 qts.
Whipped Cream	Whip	6 qts.
Cup Cake / Layer Cake	Beater	30 lbs.
Sponge Cake (w/ Flour & Butter)	Whip	22 lbs.
Sugar Cookie	Beater	22 lbs.
Bread or Roll Dough (Light/ Medium, 60% AR)	Hook	16.5 lbs. of Flour*
Bread or Roll Dough (Heavy, 55% AR)	Hook	14.5 lbs. of Flour*
Thin Pizza Dough, Pasta, Basic Egg Noodle (40% AR, Max 5 Minutes of Mixing Time)	Hook	13.5 lbs. of Flour*
Medium Pizza Dough (50% AR)	Hook	13.5 lbs. of Flour*
Thick Pizza Dough (60% AR)	Hook	16.5 lbs. of Flour*
Raised Donut Dough (65% AR)	Hook	13.5 lbs. of Flour*
Whole Wheat Dough (70% AR)	Hook	16.5 lbs. of Flour*



BMPME30 Parts Breakdown

Part No.

Part Name

www.bakMax.com i istatistic www.bakMax.com istatistic istatistic www.bakMax.com istatist		BMPME30 Parts Breakdown	Part No.	Part Name
3 impliciton ger gakter forma spicht in digate 4 impliciton ger gakter forma spicht 5 digate 1 impliciton ger gakter forma spicht				
4 gake for man spints 4 gake for man spints 6 duals 10 for spints	www.BakeMax.com			
1 1				
 diata 	Parano 8			
7 upp gase for main solds 9 9 10 10 10 <t< td=""><th></th><td></td><td></td><td></td></t<>				
 cubic holds cubic ho	0			
0 similar toob part splice. 0	9 Same	E Pa		
0 1				
1 specar	En 1 P			
1 1 cover of transmission axis 1 </td <th></th> <td></td> <td></td> <td></td>				
1 to cover of sear of basing 1 to cover of sear of basing <t< td=""><th>1º0 AR VIA</th><td></td><td></td><td></td></t<>	1º0 AR VIA			
Image: construction of the construc		55 V// /		
1 0	83			
10 Up of the set of				
17 bushing 19 topcover of main spinder 10 topcover of main spinder 11 torthing 121 turthing 122 turthing 123 execution 121 turthing 122 top 121 turthing 122 top 123 execution 121 turthing 122 top 123 top 124 top 125 top 126 top 127 top 128 top 129 top 121 top 121 top	- 46 64			
1 coverage of reacting attention attenti	° °0_ \			_
10 top cover of main splinde. 21 turbing 22 back cover 23 end cap 24 motor 25 of a selling 28 fork salls 29 fork salls 20 cover for sall 22 fork salls 23 cover for sall 29 fork salls 20 fork salls 21 cover for sall 22 fork salls 23 cover for sall 29 fork salls 20 turber 31 cover for sall 20 fork salls 21 cover for sall 20 fork salls 21 cover for salls 22 fork salls 23 sall cover for salls 24 cover for salls 25 of salls 26 motor 27 fork salls 28 sall cover 29 fork salls 29 fork				
20 transmission axle 22 back cover 22 back cover 23 of ort asle 23 of ort asle 25 of ort asle of ort asle 25 of ort asle 25 of ort asle 25 of ort asle 25 of ort asle of of asle				
21 turbing 23 end cap 23 end cap 23 end cap 23 ord 23 frame 24 motor 23 frame 24 frame 25 sold 20 frame 21 cornect for minor 23 frame 24 cornect for minor 25 sold 23 sold 24 cornect for minor 25 sold 25 sold 26 orin 27	Y			
12 best cover 24 motor 24 motor 24 motor 25 fork soft 28 fork soft 29 fork soft 20 fork soft 21 sect cover 23 fork soft 29 fork soft 31 sect for seat 32 fork soft 33 fort cap 34 connect for mincer 35 media bearing 30 turner 33 fort cap 34 connect for mincer 35 media bearing 36 media bearing 37 wave-form gasket 38 small bearing 37 wave-form gasket 38 small bearing 37 wave-form gasket 38 small bearing 39 sealing bia 30 turner 31 beard 32 fork soft 33 small bearing	2			
23 end cap 25 oll saling 26 oll saling 27 frame 28 fork salie 29 fork salie 20 fork salie 20 fork salie 20 fork salie 29 fork salie 20 fork salie 21 corrector for miner 31 corrector for miner 32 forticea 9 fortica 9 fortica 10 fortica 10 fortica 10 fortica 10 fortica		0 × 2 × 0		
24 motor 28 worm 28 fork part 30 turner 31 satiol 30 turner 31 satiol 30 turner 31 satiol 32 cocentic bushing 33 fork part 34 come for satiol 35 set of turner 31.1 cover for satiol 32 counter to turner 33 fork part 36 notedio baarting 37 wave form gaskat 38 satif acker batt 39 sating bushing 31 satif acker batt 36 needio baarting 37 wave form gaskat 38 satif bevel ger 39 sating bushing 41 stirring sati 42 origit turner 58 bastering 69 partering shating 60 turner 61 pasterin 62 <td< td=""><th></th><td></td><td></td><td></td></td<>				
30 30 30 30 30 100 31 seat of turner 32 eccente bushing 31 seat of turner 31 seat of turner 32 eccente bushing 31 seat of turner 32 seat of turner 32 eccente bushing 31 seat of turner 32 seat of turner 33 front sait 32 seat of turner 33 front sait 32 seat of turner 33 front sait 33 front sai				
B B		0 1		
27 frame 28 fork axile 29 fork part 30 turner 31 seat of turner 32 eccentic bushing 33 fork axile 34 connector for miner 35 self-tocker bett 36 needle bearing 37 wave-form gaskt 38 sealing bushing 40 imer gaer 41 stirring seat 42 chirring shaft 44 stirring shaft 45 base 90 00 91 00 92 spring 93 seating bushing 46 blocker for kettle 47 carring seating 48 scitring seating 49 scitring seating 44 stirring seating 45 base 46<	* 25	é //		
1 1	- 5-	∇ / ∇		
29 fork part 31 seat of turner 31 seat of turner 31 seat of turner 32 eccentic bushing 33 mont cap 34 connector for minner 35 self-tocker belt 36 needle bearing 37 wave-form gasket 38 self-tocker belt 38 self-tocker belt 39 self-tocker belt 30 uare 31 seathocker belt 36 needle bearing 37 wave-form gasket 38 sealing bushing 39 sealing bushing 30 connector for minner 36 needle bearing 37 wave-form gasket 38 sealing bushing 39 sealing 30 connector for minner 36 fin pittat 41 stirring shaft 42 drip tray 43 spring of union lever 56 beator 57 <th></th> <td></td> <td></td> <td></td>				
30 turner 31-1 cover for seat 32 eccentic bushing 33 troit cap 33 troit cap 36 eccentic bushing 37 troit cap 38 smill bevel gear 38 small bevel gear 38 small bevel gear 38 small bevel gear 38 small bevel gear 39 councer for seat 41 stirring seat 42 drip tray 43 planetray gear 44 stirring seat 45 base 46 locating pin 48 spring 58 spring of union lever 55 stirring rod 55 stirring rod 56 baster 57 whip 58 platen 59 kettle 60 fixing cover 61 seator 62 seator 63 spring 64 tocolum </td <th>200</th> <td></td> <td></td> <td></td>	200			
31 set of turner 32 eccentic bushing 32 eccentic bushing 32 eccentic bushing 33 front cap 34 connector for satt 35 set of turner 36 needle bearing 37 wave-form gastet 38 meedle bearing 39 sealing bushing 30 fort cap 31 sent of relicer 38 meedle bearing 39 sealing bushing 31 sent of relicer 39 sealing bushing 31 sent of relicer 39 sealing bushing 31 sent of relicer 31 sent of relicer 32 effit pray 43 planetray gear 44 stirring seat 65 seator 66 boolum 88	A 22 23			-
31-1 cover for seat 33 front cap 35 self-locker belt 36 needle bearing 37 wave-form gasket 38 small bevel gear 40 inner gear 41 stirring seat 42 drip tay 43 planetrary gear 44 stirring seat 45 base 46 locating pin 48 locating pin 49 colum 50 turner 51 platent 52 spring 53 spring				
12 eccentic bushing 33 front cap 34 connector for mincer 38 salf-locker bolt 38 salf-locker bolt 38 salf-locker bolt 39 sealing bushing 41 stirring salt 42 drip tray 43 planetrary gear 44 stirring shaft 45 base 46 locker for kattle 47 carriage 48 localing pin 49 localing pin 46 locker for kattle 47 carriage 53 spring outlon lever 54 union lever 55 spring 58 protection cover 58 protection switch 66 based	00000	All All		
33 front cap 33 front cap 33 set Name 34 connector for mincer 35 setI-locker beit 36 needle bearing 37 wave-form gasket 38 setI-locker beit 38 setI-locker beit 38 setI-locker beit 38 setI-locker 38 setI-locker 39 setI-locker 38 setI-locker 39 setI-locker 38 setI-locker 39 setI-locker 3	0 000			
Part No. Part No. Part Name 35 5 5 6 6 6 7 7 7 8 7 8 7 8 8 5 8 6 1 8 7 7 7 7 7 7 7 7 8 8 6 1 8 7 7 7 7 7 7 7 8 8 6 1 8 7 7 7 7 7 7 7 8 8 6 1 8 6 1 8 7 7 7 7 7 7 7 7 8 8 6 1 8 6 1 8 7 7 7 7 7 7 7 7 7 7 8 8 7 7 7 7 7 7	1 1			
34 connector for mincer 35 self-locker beit 36 needle bearing 37 wave-form gasket 38 small bevel gear 39 sealing bushing 40 inner gear 41 stirring seat 42 drip tray 43 planetary gear 44 stirring seat 45 base 46 locker for kettle 47 carriage 48 locating pin 49 colum 80 turner 51 platen 52 spring 53 stirring cod 56 batter 57 whip 58 protection cover 58 protection cover 59 kettle 60 termal protection switch 62 seator 63 electric board 64 termal protection switch 65 capacitor 66 A2 contactor				
35 self-locker belt 36 needle baaring 37 wave-form gasket 38 small bevel gear 39 sealing bushing 40 inner gear 41 stirring seat 42 drip tray 43 planetrary gear 44 stirring shaft 45 base 46 locker for kettle 47 carriage 48 locating pin 49 colum 50 turmer 51 platen 52 spring 53 spring of union lever 54 union lever 55 stirring rod 56 beater 51 platen 52 spring 53 spring of union lever 54 union lever 55 stirring rod 56 beater 51 platen 52 spring 53 spring of union lever 54 union lever 55 stirring rod 56 beater 51 platen 52 spring 53 spring of union lever 54 union lever 55 stirring rod 56 beater 51 switch 62 seat for switch 62 seat for switch 63 electric board 64 termal protection switch 65 capacitor	And Area	o 111 2	Part No.	Part Name
35 self-locker belt 36 nedf-locker belt 38 small bevel gear 39 sseling bushing 40 inner gear 41 stirring seat 42 drip tray 43 planetrary gear 44 stirring seat 45 base 46 locker for kettle 47 carriage 48 locating pin 49 colum 50 base 51 paping 52 spring 53 string cover 56 beater 57 whip 58 protection cover 59 kettle 61 switch 62 settor switch 63 electric board 64 termal protection switch 65 capacitor 64 termal protection switch 65 capacitor 66 AC contactor			34	connector for mincer
36 needle bearing 37 wave-form gasket 38 sealing bushing 40 inner gaar 41 stirring sealing 42 drip tray 43 stirring sealing 44 stirring sealing 45 base 46 locker for kettle 47 carriage 48 locker for kettle 47 carriage 48 locker for kettle 50 turner 51 platen 52 spring 53 spring of union lever 56 beater 57 whip 58 protection cover 59 kettle 61 switch 62 seat for switch 63 seat for switch 64 termal protection switch <th></th> <td></td> <td>35</td> <td>self-locker belt</td>			35	self-locker belt
37 wave-form gasket 38 small bevel gear 39 seeling bushing 40 inner gear 41 stirring seat 42 drip tray 43 planetrary gear 44 strirring shaft 44 bocating pin 44 column 44 bocating pin 48 column 50 turmer 51 platen 52 spring 51 platen 52 spring of union lever 55 stirring rod 56 beater 57 whip 58 protection cover 58 protection cover 58 string rod 58 protection cover 58 striring rod 58 protection cover 58 string rod 58 protection switch 60 fixing cover 61 switch 62 seat for switch 63 electric board 64 termal protection switch 65 capacitor				
38 small bevel gear 39 sealing bushing 40 inner gear 41 stirring seat 42 drip tray 44 stirring shaft 45 base 44 strirring shaft 45 base 44 strirring shaft 45 base 46 locker for kettle 48 locating pin 49 colum 50 turner 51 platen 52 spring 53 spring of union lever 54 union lever 55 stirring rod 56 beater 57 whip 58 protection cover 59 kettle 60 fixing cover 61 switch 63 electric board 64 termal protection switch 65 capacitor 66 AC contactor	A Day Na	SS		
39 sealing bushing 40 inner ggar 42 drip tray 43 planetrary ggar 44 stirring sati 42 drip tray 43 planetrary ggar 44 stirring shaft 45 base 46 locker for kettle 48 locating pin 48 locating pin 48 locating pin 48 locating pin 49 column 50 turner 51 platen 52 spring of union lever 53 spring of union lever 54 union lever 55 stirring rod 56 beater 57 whip 58 protection cover 58 kettle 60 fixing cover 61 switch 62 sat for switch 63 electric board 64 termal protection switch 63 electric board 64 termal protection switch 65 capacitor	And MILL			
40 inner gear 41 stirring seat 42 drip tray 43 planetrary gear 44 stirring shaft 45 base 46 locker for kettle 47 carriage 48 locker for kettle 49 colume 50 turner 51 platen 52 spring 53 spring of 55 batting rod 56 batter 57 whip 58 protection cover 58 string rod 56 batter 57 string rod 58 protection cover 58 string rod 51 string rod 52 spring 53 spritection cover 58 colume 51 string rod 52 seat or switch 53 seat or switch 53 seat or switch 53 seat or switch	N R V T	a Mr		
41 stirring seat 42 drip tray 43 planetrary gear 44 stirring shaft 45 base 46 locating pin 47 carriage 48 locating pin 49 column 50 planetrary gear 48 locating pin 49 column 50 spring of union lever 51 platen 52 spring of union lever 53 spring rod 55 stirring rod 56 beater 57 whip 58 protection cover 59 kettle 60 fixwitch 62 seat for switch 63 electric board 64 termal protection switch 65 AC contactor		₩ 1/ 1		
42 drip tray 43 planetrary gear 44 strirring shaft 45 base 46 locker for kettle 47 cariage 48 locating pin 49 colum 50 turner 51 platen 52 spring 53 spring of union lever 54 union lever 55 stirring rod 56 beater 57 whip 58 protection cover 59 kettle 60 fixing cover 61 switch 62 seator 61 switch 62 seator 61 switch 62 seator 61 switch 62 seator 63 electric board 64 termal protection switch 65 capacitor 66 AC contactor	5 55 55	an 180 -		
Image: state of the state				
44 strirring shaft 45 base 46 locker for kettle 47 carriage 48 locating pin 49 colum 50 turner 51 platen 52 spring of union lever 53 spring of union lever 55 stirring rod 56 beater 57 whip 58 protection cover 59 kettle 60 fixin witch 62 seat for switch 63 electric board 64 termal protection switch 65 capacitor 66 AC contactor				
45 base 46 locker for kettle 47 carriage 48 locating pin 49 colum 50 turner 51 platen 52 spring 53 spring of union lever 56 beater 57 whip 58 protection cover 59 kettle 60 fixing cover 61 switch 62 seat for switch 63 electric board 64 terma switch 65 capacitor		TROADO & MALL		
46 locker for kettle 47 carriage 48 locating pin 50 turner 51 platen 52 spring 53 spring of union lever 54 union lever 55 stirring rod 56 beater 57 whip 58 protection cover 61 switch 62 seat for switch 63 electric board 64 termal protection switch 65 capacitor		The second secon		
Image: Contract of the second seco		V X LOG		
Image: state of the state	S 31 2 88 2 - /// /			
Image: state of the state			47	carriage
Image: sector switch		YKAL PR &	48	locating pin
Image: set of the set of		*		
Image: state of the state				
Image: state of the state				
Image: Second	and the state of the			
Image: second				
55 stirring rod 56 beater 57 whip 58 protection cover 59 kettle 60 fixing cover 61 switch 62 seat for switch 63 electric board 64 termal protection switch 65 capacitor 66 AC contactor	\land // \land			
Image: Second state sta	11 13			
Image: Sector sector 56 beater Image: Sector sector 57 whip Image: Sector sector 59 kettle Image: Sector sector 60 fixing cover Image: Sector sector 63 electric board Image: Sector 65 capacitor Image: Sector 66 AC contactor		Q7 4 4		
58 protection cover 59 kettle 60 fixing cover 61 switch 62 seat for switch 63 electric board 64 termal protection switch 65 capacitor 66 AC contactor				
59 kettle 60 fixing cover 61 switch 62 seat for switch 63 electric board 64 termal protection switch 65 capacitor 66 AC contactor		No No		
60 fixing cover 61 switch 62 seat for switch 63 electric board 64 termal protection switch 65 capacitor 66 AC contactor		X X K		
60 fixing cover 61 switch 62 seat for switch 63 electric board 64 termal protection switch 65 capacitor 66 AC contactor				kettle
Image: Sector set of the sector set of the sector set of the set of		Act C		
62 seat for switch 63 electric board 64 termal protection switch 65 capacitor 66 AC contactor				
63 electric board 64 termal protection switch 65 capacitor 66 AC contactor				
64 termal protection switch 65 capacitor 66 AC contactor				
N M M 65 capacitor N M M M M N M M M M N M M M N M M M N M M M N M M M N M M M N M M M N M M M N M				
- 66 AC contactor	/// 8			
66 AC CONTACTOR	4 m v	39		
67 wire and plug	and a second and a second and a second	1000 NOTO		
			67	wire and plug

Warranty & Service

BakeMax provides a 1-Year Limited Parts and Labor warranty on most items, there are select items which carry a Limited 2-Year Warranty. Extended Warranty is available on some products. Please contact us for details. The Warranty is not transferable and is limited to original installation of equipment sold by BakeMax for the original user.

For all Warranty Claims, Proof of Purchase and/or Serial Number is required. Once the machine is approved, BakeMax will provide our customers with on-site Warranty Coverage on all equipment more than 100lbs. BakeMax assumes no responsibility for down time or loss of product. Repairs must be Pre-Authorized by BakeMax and have a Service Authorization Number issued prior to commencing Warranty Service.

Warranty begins 10-Days after shipping from warehouse; delays in installation which would extend the Warranty must be Approved. All equipment must be installed and connected by Qualified Professionals in accordance with the Manual Specification. Products shipped are to be inspected at time of delivery, the receiver is responsible for inspection.

Any abuse or improper use of the equipment will void the warranty. This includes failure to follow all cleaning instructions, improper installation, improper maintenance, failure to follow capacity charts, improperly wired electrical connections. The Warranty does not apply to abuse, willful or accidental damage, or to products used for other than their intended purpose. Normal wear parts such as Accessories, Attachments, or Electrical Components such as Fuses, Bulbs, Elements, and Switches carry a 90-Day Warranty only.

Bench Warranty (Machines Weighing 100 lb. or less)

Once the machine is Approved for Warranty Service, if the machine requires Warranty work in less than 30 days of purchase date, BakeMax will pay all shipping charges. Once the machine is received and repaired it will be returned to the user at BakeMax expense. Freight Damages during return shipping is the responsibility of the owner of the machine.

The following is not covered under the BakeMax Warranty:

- 1. Overtime Labor Rates are not covered by BakeMax.
- 2. All parts will be shipped via Ground Courier only; If Express Shipping is required, it will be the responsibility of the Customer or Dealer.
- 3. Travel for Warranty Service is covered up to 100 Miles /160 Km Roundtrip, any further milage will be the responsibility of the Customer or Dealer.
- 4. There is no on-site Warranty Service for Residential Addresses or addresses outside of the contiguous United States (Lower 48) or Canada.

**BakeMax machines sold outside of the contiguous United States (Lower 48), or Canada will carry 1-Year Parts Warranty only.

Terms & Conditions

Terms

Net 15 days subject to Credit Approval. All past due Accounts are subject to 2% per month Service Charge as per Credit Application. We accept Visa, MasterCard, and Discover Credit Cards. We also accept E-Transfer & Wire Transfer, additional fees may apply.

Pricing

All prices are subject to change without notice. All prices are Sales Tax Extra, should you be claiming Tax Exemption, Tax Exempt Forms must accompany your Purchase Order. BakeMax products are sold in Canadian and US Dollars. BakeMax is not responsible for specifications errors or printing errors.

Shipping

Free shipping to Canada and the U.S. Minimum order \$6,000 for BakeMax and \$10,000 for BakeMax America Cooking Line. Tailgate Delivery is \$90.00 minimum. All checks made Payable to Titan Ventures International Inc. BakeMax is not responsible for goods damaged during shipping. BakeMax is not responsible for any delays in delivery once product has left our Warehouse and is in the carrier's possession. Products shipped are to be inspected at time of delivery, the receiver is responsible for inspection. Damaged Freight Claims are to be claimed with the carrier. BakeMax assumes no responsibility for Damaged Freight. Shipping Insurance available by request. By signing your name on the delivery receipt without noting any damages, you are stating that you have received your shipment in Acceptable Condition.

Return Policy

Returns will not be Approved unless in Writing. Returns must be made within 30-Days of Purchase and must have a Return Authorization Number issued before returning. The purchase order number, reason for return, and the serial number(s) of the unit are required for the Return Authorization Number. Minimum return amount of \$100.00.

Returns are subject to a minimum restocking fee of 30%. The cost of any repairs or re-crating required will be charged back to the dealer. If there is a manufacturer's defect BakeMax® will pay standard freight returned and prepaid shipping back to the customer.

Special Order Items, Clearance / Discontinued Equipment, Parts, Refurbished/Demo Equipment, or Non-Standard items are not Returnable.

Ordering Information

Send purchase orders to BakeMax via e-mail orderdesk@bakemax.com or Fax (506-859-6929). Use Model or Part number when ordering including Voltage Requirements, and Product Description. Please include the Dealer, Name, Address, terms, special delivery, or instructions required or attention names to be applied to packaging. Please notify BakeMax should you need order confirmation or tracking numbers, by calling 1-800-565-2253 or email orderdesk@bakemax.com.

Special Terms and Conditions

BakeMax reserves the right to make improvements or equipment changes without prior permission. Setup and Installation are the end user's Responsibility. Failure to properly Install or Maintain Equipment may Void Warranty.

Catalog, Spec Sheets and Website

BakeMax is not liable for incorrect information found in our Catalog, Spec Sheets or Website. Please contact us to confirm specifications. Pictures and specifications are for general purposes only. Product may not be exactly as shown. Prices and availability may change at any time without notice. Dimensions shown may change at any time without notice.